

## Section 10 METER READING

### 10.1 Cooperative's Responsibility

The member-consumers' meters shall be read each month by a representative of the Cooperative or by an automatic meter reading (AMR) device. Meters normally shall be read on or about the first day of the month.