

## **Section 22 SPECIAL CONDITIONS OF SERVICE**

### **22.1 Corrective Equipment**

Welders, hoists, grain dryers, and other equipment, where the use of electricity is intermittent, or the load fluctuates rapidly, shall be installed and used in such a manner as to not adversely affect voltage regulation or impair the Cooperative's service to other member-consumers. When such equipment creates fluctuating voltage or power factor conditions, or any other disturbance detrimental to service to other member-consumers or to the Cooperative's use of its own equipment, the member-consumer shall be required to install and maintain, at the member-consumer's expense, suitable corrective equipment to eliminate said detrimental effects.

### **22.2 Arc Welding Installations**

The Cooperative recommends, for small intermittent use, only those welders meeting NEMA standards, with power factor correction, operating at 230 volts, and a maximum of 180 amperes output current. Larger welders will be considered by the Cooperative upon application by the member-consumer.

## **22.3 Requirements for Electric Motors**

### **22.31 Safety Requirements**

All installations of power loads on the Cooperative's system shall conform to the safety rules and regulations set forth in the National Electrical Code and such other codes and specifications as may be applicable, and to any other requirements of the Cooperative.

### **22.32 Protective Devices**

The member-consumer shall be required to provide suitable protective devices so that the motors and equipment to which they are connected will be protected from injury and from improper or dangerous operation in case of overload, loss of voltage, low voltage, single-phasing of poly-phase motors, reversal of phase rotation of poly-phase motors, or the reestablishment of normal service after any of the above. The Cooperative is not responsible for motor damage caused by any of the above conditions.

### **22.33 Large Motor Applications**

No 230-volt motor with inrush current in excess of 260 amperes shall be installed without application by the member-consumer and the express approval of the Cooperative. The Cooperative reserves the right to limit the number and size of motors installed on a single-phase service.

### **22.34 Starting Equipment**

The member-consumer and/or an agent shall contact the Cooperative regarding requirements for motor starting equipment, protective equipment, wiring, and other motor specifications.

### **22.35 Maximum Single-Phase Loads**

In each case where the simultaneous single-phase load is about to exceed the capability of the installed transformer, it shall be the responsibility of the member-consumer to make arrangements with the Cooperative for the installation of a suitable transformer before such simultaneous load exceeds the capability of the presently installed transformer. The Cooperative reserves the right to limit the capacity of any single-phase service when, in its judgment, such service will impair the service to other member-consumers or such service shall exceed the capacity of the Cooperative facilities.

#### **22.4 Standby Generators**

No other source of supply of electricity shall be introduced or used by any member-consumer in conjunction with electric service supplied by the Cooperative without prior approval of the Cooperative.

If standby facilities are to be employed, a single-change-over switch or relay of adequate capacity shall be provided and so connected that the Cooperative lines cannot become energized by a standby power under any conditions.

#### **22.5 New Structure Energy Conservation Standards (20.12)**

The Cooperative shall not provide electric service to any structure completed after April 1, 1984, unless the owner or builder of the structure has certified to the Cooperative that the building conforms to the energy conservation requirements adopted under Iowa Administrative Code. If this compliance is already being certified to a state or local agency, a copy of that certification shall be provided to the utility. If no state or local agency is monitoring compliance with these energy conservation standards, the owner or builder shall certify that the structure complies with the standards by signing a form provided by the Cooperative. No certification will be required for structures that are not heated or cooled by electric service, or are not intended primarily for human occupancy.